




## CLEANING / MAINTENANCE / STORAGE

### CLEANING

- ❖ Clean the electroform with a soft bristle brush and NONABRASIVE liquid soap under running water.
- ❖ To clean, move the brush up and down while pushing lightly against the electroform.
- ❖ Dry the electroform by applying hot, dry air (use a hair dryer).
- ❖ When placing the electroform in the mould, wear protective gloves so as not to leave any grease or dirt deposits.
- ❖ If any deposits or spots persist, please contact DBM Reflex.

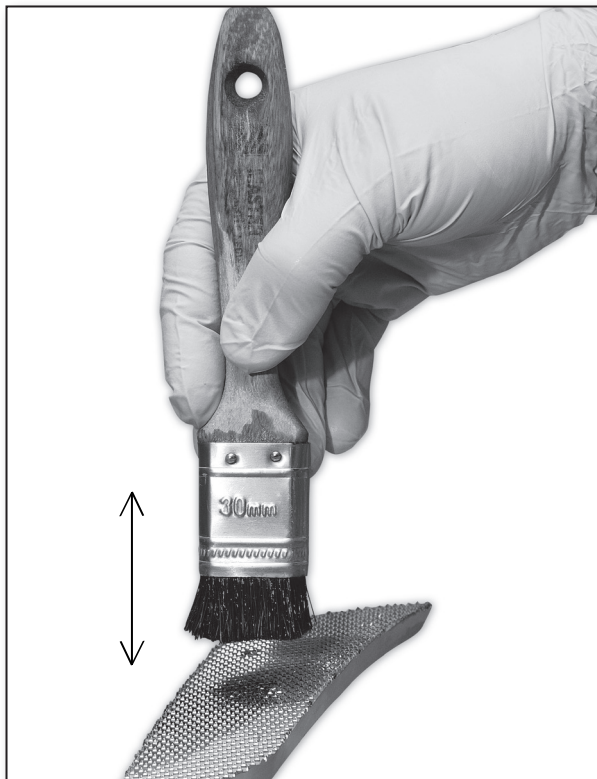

### ELECTROFORM INSTALLED ON THE MOLD

To prolong the electroform's shelf-life:

- ❖ Have air vents done in the mould, especially around the electroform.
- ❖ Clean the air vents once a week, more if there is any sign of obstruction.
- ❖ Keep the electroform free of oil and dirt during use.
- ❖ Never heat an electroform covered with a rust protector or oil.
- ❖ Ensure all molding material used is clean and dry.

### STORING THE ELECTROFORM

- ❖ Since the electroform will not rust, you do not need any rust protector.
- ❖ Protect the surface of the prisms with cardboard, then wrap in a clean cloth and place in a safe place.

### ATTENTION

Electroforms are fragile mould components and may sustain visible or invisible damage if not handled and used with care.

When in doubt, please contact DBM Reflex.